



Cooler is Better!TM

Owner's Manual

Walk-in Monitoring System 100B

Used in UL Listed Door Panel Assemblies



American Panel Corporation
5800 S.E. 78th Street, Ocala, Florida 34472-3412
Phone: (352) 245-7055 Fax: (352) 245-0726
E-mail: service@americanpanel.com

Thank you, and congratulations on your purchase of an American Panel Walk-in Monitoring System 100B. We take great pride in engineering and manufacturing each of our products. With the goal of providing the highest accuracy and quality possible, our state-of-the-art manufacturing and quality control facility enables us to continually explore new technologies so that we can provide you with the finest equipment in the industry.

Because of our commitment to your satisfaction, we have developed this Owner's Manual to guide you through the complete installation process, and to help you maintain your equipment properly. Familiarization and compliance with this manual will ensure you years of trouble-free operation.

On occasion situations can arise and will require the help of the factory, whether it be technical information, service or replacement of parts. We have a highly trained Customer Service and Parts Department available to help when these situations arise. We also offer a national network of service agencies that may be contacted for warranty and out-of-warranty service.

When contacting the factory, please refer to the equipment serial number which can be located on the identification plate positioned on the interior of the door frame.

Thank you once again for your purchase of American Panel equipment.

"Our reputation rests on the steadfast pursuit of your satisfaction".



E78551



American Panel Corporation

5800 S.E. 78th Street, Ocala, Florida 34472-3412

Phone: (352) 245-7055 Fax: (352) 245-0726

E-mail: service@americanpanel.com

- 1 Introduction and Features 2
 - 1.1 Temperature Monitoring and Alarms 2
 - 1.2 Door Frame Heater Temperature Control and Monitoring 2
 - 1.3 Electronically Controlled Light Switch and Automatic Light Off 2
- 2 Controller 3
- 3 Parameter Programming 4
- 4 Air Temperature Probe Offset 8
 - 4.1 Calculating the Probe Temperature Offset 8
 - 4.2 Adjust the Probe Temperature Offset 8
- 5 Change The Access Code 11
- 6 Restore The Default Settings 12
- 7 Operating WIMS 100B 13
 - 7.1 Turn On The Controller 13
 - 7.2 Read The Air Temperature 13
 - 7.3 Read The Door Frame Heater Temperature 13
 - 7.4 Operate The Light Switch 13
 - 7.5 High Alarm 14
 - 7.6 Low Alarm 14
- 8 Error Messages 14
- 9 Electrical Diagram 15

1 Introduction and Features

WALK-IN MONITORING SYSTEM 100B (WIMS 100B) was designed by American Panel Corporation to address multiple issues regarding walk-in units and to incorporate the functionalities of various walk-in door devices in a single flexible, reliable, and user friendly controller.

WIMS 100B features:

- Dual Room Walk-in Temperature Monitoring
- Dual Room Walk-in Temperature Alarms
- External Alarm Output With Direct 115VAC, Up To 150W
- Door Frame Heater Temperature Controlling
- Door Frame Heater Temperature Monitoring
- Electronically Controlled Light Switch With Light On/Off Indicator
- Automatic Light Off
- External Switch Connection For CAL-OSHA Back-To-Back Light Control (Optional)
- Celsius Or Fahrenheit Temperature Selection

1.1 Temperature Monitoring and Alarms

To efficiently monitor the air temperature in a double room walk-in, WIMS 100B is equipped with two highly accurate temperature probes, one for each room of the walk-in. The ultra bright LED display will indicate the air temperature for each room separately.

The controller alarm system is comprised of a high and low temperature alarm with built in trigger delay to allow small temperature fluctuations (occurring in daily walk-in operations such as door openings, door closings, and evaporator defrost cycles) without triggering the alarms. WIMS 100B will detect the alarm conditions for each room separately. The alarm's set points and delay times are fully programmable for each room.

In case the air temperature in one of the walk-in rooms is reaching an alarm condition, WIMS 100B uses visual and audible alert methods together with the indication for the corresponding room. In addition to the integrated buzzer and alarm display message, the controller has a 115V/60Hz/150W output for additional external alarm devices (optional).

1.2 Door Frame Heater Temperature Control and Monitoring

Door frame heater control and monitoring is done by two different methods that work in conjunction to save energy and to maintain the door frame heater temperature within a preset range.

A temperature probe is mounted on the door frame heater wire to accurately monitor its temperature. Viewing the door frame heater temperature is as easy as pressing a button.

WIMS 100B controls and monitors the door frame heater for the door that is mounted on. The control for the door frame heater corresponding to the access door for the second room is done separately by a WIMS 100 controller.


1.3 Electronically Controlled Light Switch and Automatic Light Off

The flexibility of WIMS 100B allows the user to operate the light from multiple locations such as multiple doors. The integrated light button is equipped with two LED lights to display the ON/OFF status of the light and also to indicate the button location in the dark.

The Automatic Light Off feature of WIMS 100B enables the user to save energy. The amount of time the light will stay on can be set from 1 minute to 60 minutes, or can be set for manual shut off only.

Back-to-back light control is provided as an optional feature.

2 Controller

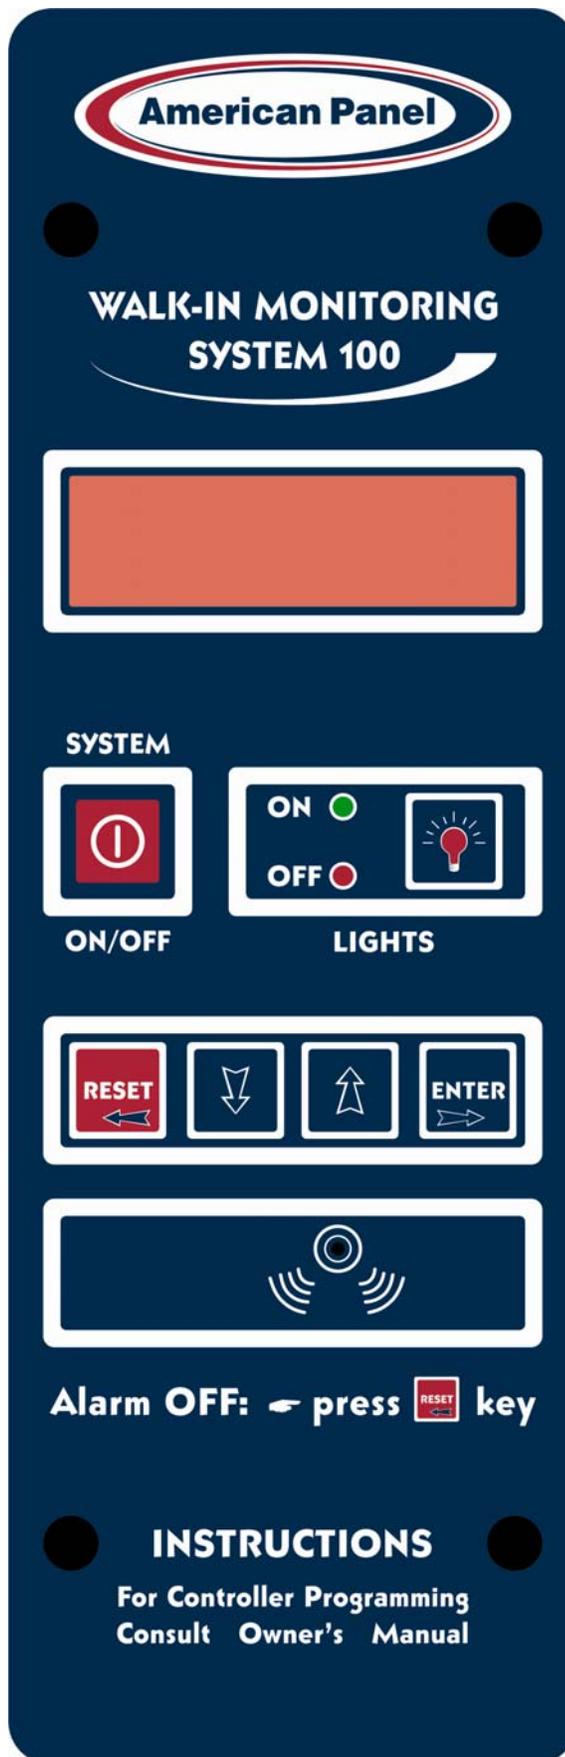

3 Parameter Programming

All American Panel Corporation walk-in monitoring systems are programmed at the factory. The settings in this manual are considered default for WIMS 100B and were established to suit generic walk-in operating environments. However, the customer may change any of these settings as required.

Note: During the programming steps, any delay longer than one minute before pushing the next button will cause the controller to revert to the “OFF” state. To avoid this, the following instructions should be carefully reviewed and the desired settings should be determined before proceeding.

If the controller goes to the “OFF” state, the programming mode will have to be restarted.

Note: During programming, pressing and holding the UP or DOWN button will increase the programming speed.

The instructions below contain screens with the exact messages displayed by the controller during the programming procedure. Follow the notes located to the left of these screens.

Before entering the programming mode, the controller has to be in the “OFF” state.



If it is not, press and hold  for five seconds.



The display will show:

To enter the programming mode, press and hold  for five seconds.



The display will show:

Enter The Access Code

To enter the default access code, press the following buttons in order:



When finished, press .



Note: If the code entered is not correct, the controller will display the error message and switch back to the previous screen.

Note: The access code is a safety feature that limits the access to the programming mode and therefore will prevent unauthorized personnel from tampering with the settings.

After entering the code successfully, the controller will ask you if you want to

The display will show:



change the code. To leave it unchanged, press .



The display will show:



Press .



Door Frame Heater Settings

The display will show:



This function will turn the door frame heater on or off.

By default, the door frame heater is set to on ("1"). If you wish to turn the door frame heater off, change the flashing value from "1" to "0" (off) by pressing



or . Press when done.

Note: If you set the flashing value to "0", door frame heater off, the controller will skip to alarm settings. In case the flashing value is set to "1", door frame heater on, the controller will guide you thru door frame heater settings.

The display will show:



This function will display the walk-in temperature which will determine when the door frame heater will start.

Set the air temperature inside the walk-in at which the door frame heater will

start. To do so press  to increase or  to decrease the flashing value representing the air temperature.



Press when done.

The display will show:



This function will set the door frame heater temperature.

Press  or  to change the door frame heater temperature (the flashing value).

Once the door frame heater temperature reaches this setting, it will stay close to the set point according to the factory set differential.

Note: Set the door frame heater temperature between 75⁰F and 120⁰F.



Press when done.

(Default value for coolers)



(Default value for freezers)

The display will show:



Press  or  to set the percentage (flashing value) of the 4 minute cycle which the door frame heater will stay on. The remaining time left of the 4 minute cycle the door frame heater will be off. This cycle will repeat for as long as the controller is on.

See the examples below.

(Default value for coolers)



(Default value for freezers)

Ex1: If the flashing value is set 75P (75%), the door frame heater will run for 3 minutes and it will be off for 1 minute. This cycle will repeat for as long as the controller is on.

Ex2: If the flashing value is set to 100P (100%), the door frame heater will run continuously.

Ex3: If the flashing value is set to 0P (0%), the door frame heater will not run at all.

Ex4: If the flashing value is set to 50P (50%), the door frame heater will run for 2 minutes and it will be off for 2 minutes. The cycle will repeat for as long as the controller will be on.

Note: Do not set Door Frame Heater Percent to 0P (0%) unless you want to turn the door frame heater off.



Press  when done.


Alarm Settings Front Room (The Closest Room To The WIMS 100B)

The display will show:

Set the high air alarm for the room that is the closest to the WIMS 100B



controller. To do so, press  or  to change the flashing value representing degrees Fahrenheit. If the air temperature in the front room goes above this set point, the alarm will go off.

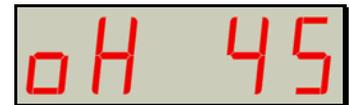

(Default value for coolers)



(Default value for freezers)



Press  when done.

The display will show:

Set the low air alarm for the room that is the closest to the WIMS 100B



controller. To do so, press  or  to change the flashing value representing degrees Fahrenheit. If the air temperature in the front room goes below this set point, the alarm will go off. You can set low air alarm anywhere between -30⁰F and 50⁰F.



(Default value for coolers)



(Default value for freezers)



Press  when done.

Alarm Settings Back Room

The display will show:

Set the high air alarm for the second room that is being monitored by the WIMS



100B controller. To do so, press  or  to change the flashing value representing degrees Fahrenheit. If the air temperature in the back room goes above this set point, the alarm will go off.



(Default value for coolers)



(Default value for freezers)



Press  when done.

The display will show:

Set the high air alarm for the second room that is being monitored by the WIMS

(Default value for coolers)

100B controller. To do so, press  or  to change the flashing value representing degrees Fahrenheit. If the air temperature in the back room goes below this set point, the alarm will go off. You can set low air alarm anywhere between -30⁰F and 50⁰F.

(Default value for freezers)

Press  when done.

The display will show:

Set the alarm time delay. To do so, press  or  to change the flashing value representing minutes.

If the air temperature goes out of the preset limits the alarm will go off only after the time set here elapses.

The alarm time delay can be set anywhere between 0 (no delay) and 60 minutes. Press  when done.

Light Off Delay

The display will show:

Next the controller will prompt you to set the automatic light off delay.

The automatic light off delay is the elapsed time between the moment the user turns the light on and the moment the controller will automatically turn it off.

Set the automatic light off delay by pressing  or  to change the flashing value representing minutes. The automatic light off delay can be set between 1 and 60 minutes. In case the customer does not want an automatic light off delay, set this function to “∞”.

Press  when done.

The display will show:

4 Air Temperature Probe Offset

By default, the air temperature probe is located on the door frame, inside the walk-in. The WIMS 100B will display the air temperature at that particular location **ONLY**. However, WIMS 100B can be adjusted to estimate the temperature of a remote location inside the walk-in. To take advantage of this feature, set the air temperature probe offset.

4.1 Calculating the Probe Temperature Offset

- Establish the location inside the walk-in where you want to monitor the air temperature. Ex: Return Air Temperature (behind the evaporator)
- Using a calibrated thermometer, measure the air temperature at that particular location. T_{MEASURED}
- Read the air temperature on the display of WIMS 100B. $T_{\text{WIMS 100}}$
- The temperature difference between the two temperatures is the temperature offset. T_{OFFSET}

$$T_{\text{OFFSET}} = T_{\text{MEASURED}} - T_{\text{WIMS 100}}$$

Ex:

Return Air Temperature (measured behind the evaporator)	-5°F
WIMS 100 Displayed Temperature	-2°F
The Temperature Offset will be: $(-5^{\circ}\text{F}) - (-2^{\circ}\text{F}) = -3^{\circ}\text{F}$	

4.2 Adjust the Probe Temperature Offset

Make sure the controller is in “OFF” state.

If it is not, press and hold  for 5 seconds.

The display will show:



Press and hold  for ten seconds.

The display will show:



To enter the default access code, press the following buttons in order:



When finished, press



The display will show:

Un F

Press  or  to change the displayed unit of temperature.

When finished, press .

The display will show:

bt 3.6

Press  to skip.

The display will show:

cH 50

Press  to skip.

The display will show:

oA 0

Adjust the Probe Temperature Offset For the Front Compartment

Press  or  to match the flashing value with the temperature offset (T_{OFFSET}) calculated in the previous chapter (4.1).

When finished, press .

The display will show:

oH 0

Press  to skip.

The display will show:

Adjust the Probe Temperature Offset For the Back Compartment

Press  or  to match the flashing value with the temperature offset for the back compartment.

When finished, press .

The display will show:

dd 5

Press  to skip.

The display will show:



You have finished adjusting the probe temperature offset. Press  to turn the controller on. The display will reflect the air temperature at the desired location.

Note:

The air probe temperature offset is not to be used to make up for undersized or defective refrigeration systems. If a different temperature is desired inside the walk-in, contact a refrigeration technician to adjust your refrigeration system.

Special care should be taken when adjusting the air probe temperature offset. You should never adjust the air probe temperature offset for more than 5⁰F.

American Panel Corporation is not responsible for any losses such as food spoilage resulted from misusing the air probe temperature offset.

5 Change The Access Code

To change the Access Code, you have to enter the programming mode. Follow the instructions below.

Before entering the programming mode, the controller has to be in the “OFF” state.

If it is not, press and hold  for 5 seconds.

The display will show:



To enter the programming mode, press and hold  for five seconds.

The display will show:



Enter The Access Code

To enter the default access code, press the following buttons in order:   .

When finished, press .

The display will show:

After entering the code successfully, the controller will ask if you want to change the access code.




To change the code, change the flashing value to “1” by pressing  or



 and then press .

Enter The New Code

The display will show:

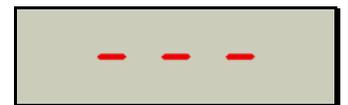

Enter any three key combination of the following buttons:  



Next, the controller will display for a second the message shown in the figure on the right and then switch to the three dashes display.



Re-enter the new code.

The display will show:



After successfully re-entering the new code, the controller will briefly display the message shown in the figure on the right.



The display will show:



If you wish to skip parameter programming press  until you get to the OFF message.

To change the controller parameters, see the “Parameter Programming” section of this manual.

Make a note of the new code.



6 Restore The Default Settings

To restore the default settings, press and hold  and  for ten seconds.

The display will show:



Press .

Note: After restoring the default settings, you may have to reprogram the controller. Pay special attention to the door frame heater settings.

7 Operating WIMS 100B

7.1 Turn On The Controller

From the “OFF” state, turn the controller on by pressing .

The controller needs to stay on in order to operate. Leave it on at all times.

7.2 Read The Air Temperature

When on, the LED display will alternate the readings for the inside air temperature of the walk-in front room and back room.



(Front Room Air Temp.)

Alternating with:



(Back Room Air Temp.)

7.3 Read The Door Frame Heater Temperature

WIMS 100B monitors and controls the door frame heater temperature at all times.

To display the door frame heater temperature, press and hold . The display will indicate the door frame heater temperature. As an example see the illustration on the right.



When  is released, the controller will switch back to air temperature display.

7.4 Operate The Light Switch

To turn the light on, press . The green LED, next to the light button, will illuminate indicating ON

status of the light. To turn the light off, press  one more time. The green LED will go off and the red LED will illuminate indicating OFF status of the light. If the automatic light off feature is enabled, the light will turn off automatically after the preset time expires.

If a back-to-back light control option was purchased, the light can be switched on and off from the provided button.

7.5 High Alarm

If the air inside one of the walk-in rooms goes above the preset high limit, the alarm for that room will go off.

The buzzer will go off and the display will flash one of the messages on the right:



(Front Room)



(Back Room)

7.6 Low Alarm

If the air inside one of the walk-in rooms goes below the preset low limit, the alarm for that room will go off.

Just as in high alarm event, the buzzer will go off and the display will flash one of the messages on the right:



(Front Room)



(Back Room)

In both cases, Low Alarm and High Alarm, the integrated alarm buzzer and the optional external alarm can be



turned off by pressing . However, the visual alarm message will stay on the display until the air temperature enters the preset range.

8 Error Messages

Problems beyond the routine maintenance would most likely involve the refrigeration system or the control system. Please contact the factory for assistance if this should occur. Note that the warranty would be voided if these components are serviced by other than trained technicians approved by the manufacturer.

There are three error messages that could occur on WIMS 100B display:

Air probe for the front room is not good



Air probe for the back room is not good



Heater probe is not good




If any of the error messages occur call a technician to check the integrity of the probes.

Here is a chart with acceptable electrical resistance (Ohm) at various temperatures for the temperature probes.


°C	°F	kOhm
0	32	27.28
25	77	10.00

9 Electrical Diagram

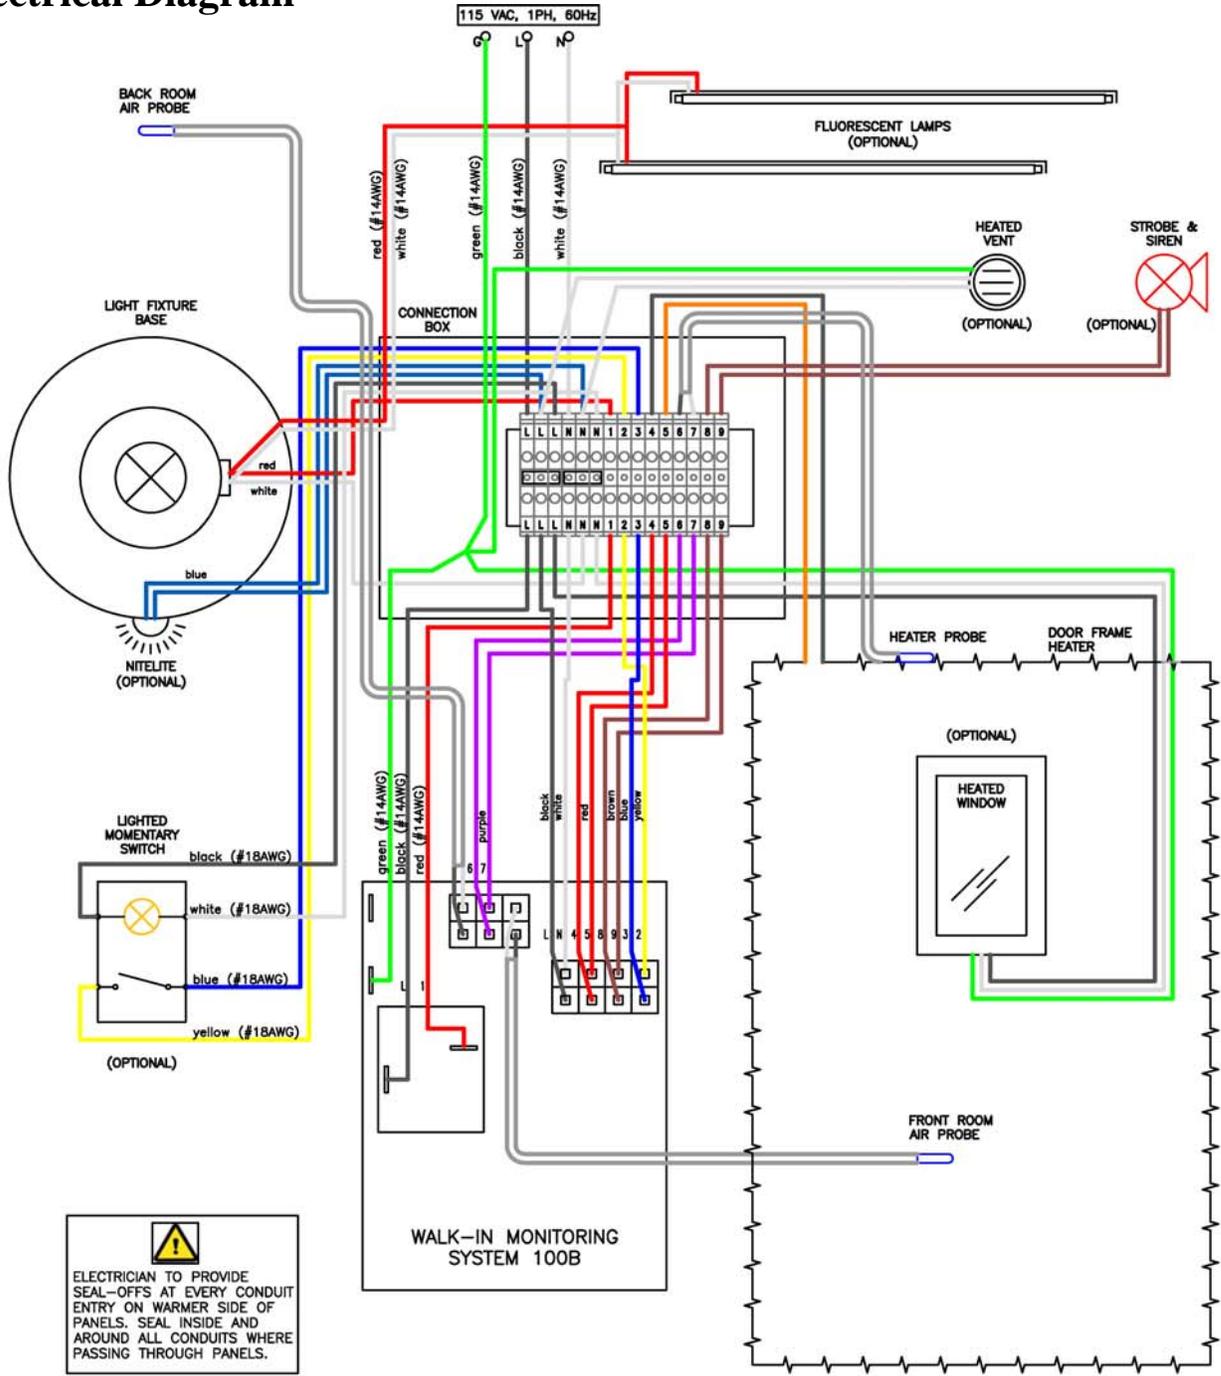

⚠
 ELECTRICIAN TO PROVIDE SEAL-OFFS AT EVERY CONDUIT ENTRY ON WARMER SIDE OF PANELS. SEAL INSIDE AND AROUND ALL CONDUITS WHERE PASSING THROUGH PANELS.

This drawing and information contained herein are the exclusive property of American Panel Corporation. It shall be returned to American Panel Corporation upon demand and shall not be reproduced in whole or part, disclosed to anyone else, or used without the written consent of American Panel Corporation.

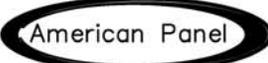REV.	DATE	DESCRIPTION	REV. BY	APP. BY
 AMERICAN PANEL CORPORATION 5800 S.E. 78th St. Ocala, Florida 34472 Ph. (352) 245-7055 Fax (352) 245-0726				
TITLE: WIRING DIAGRAM (1DOOR)				
MODEL: WALK-IN MONITORING SYSTEM 100B				
DATE: 05/16/08	DRAWN BY: GC	P.O.#:	REV B	
SCALE: NTS	DWG#: 98023-00	JOB#:	SHEET 1 of 1	



American Panel Corporation

5800 S.E. 78th Street, Ocala, Florida 34472-3412

Phone: (352) 245-7055 Fax: (352) 245-0726

E-mail: service@americanpanel.com